

■ DMX 通道数值

DMX 数值 标准模式 (30 通道)		
通道	DMX 值	功能
1 Dimmer	0---255	Darkness----->Bright
2 Dimmer FINE	0---255	
3 Shutter, strobe	0---3	Closed
	4---103	Slow Strobe--->Fast Strobe
	104---107	Open
	108---207	Slow Pulsation--->Fast Pulsation
	208---212	Open
	213---225	Random Slow Strobe
	226---238	Random Medium Strobe
	239---251	Random Fast Strobe
	252---255	Open
4 IRIS	0---128	MAX----->MIN
	129---131	Close
	132---171	Slow Puslation----> Fast Puslation
	172---211	Slow Puslation Fast Close---->Fast Puslation Fast Close
	212---251	Slow Puslation Fast Open---->Fast Puslation FastOpen
	252---255	OPEN
	5 Cyan	0---255
6 Cyan Fine	0---255	
7 Magenta	0---255	EXCLUDED--->INSERTED(FINE IN Channel 8)
8 Magenta Fine	0---255	
9 Yellow	0---255	EXCLUDED--->INSERTED(FINE IN Channel 10)
10 Yellow Fine	0---255	
11 CMY Macro	0---255	
12 Color	0---104	Color Scroll White--->Color7
	105---117	Color7
	118---130	Color6
	131---144	Color5
	145---157	Color4
	158---169	Colo3
	170---182	Color2
	183---195	Color1
	196---208	White
	209---231	CW Slow Rotation-----> Fast Rotation
	232---255	CCW Slow Rotation-----> Fast Rotation
13 Gobo1 Select	0----9	WHITE
	10----20	GOBO 1

	21----29 30----39 40----49 50----59 60----69 70----79 80----89 90----104 105---119 120---134 135---149 150---164 165---179 180---194 195---209 210---232 233---255	GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOB01 Shake Slow---->Fast GOB02 Shake Slow---->Fast GOB03 Shake Slow---->Fast GOB04 Shake Slow---->Fast GOB05 Shake Slow---->Fast GOB06 Shake Slow---->Fast GOB07 Shake Slow---->Fast GOB08 Shake Slow---->Fast CW Slow Rotation---> Fast Rotation CCW Slow Rotation---> Fast Rotation
14 Gobol index Rotation	0---127 128---191 192---255	Position 0° -->360° (FINE in channel15) CW Fast Rotation----> Slow Rotation CCW Slow Rotation----> Fast Rotation
15 Gobol index Rotation FINE	0---255	Gobol index Rotation FINE
16 Gobo2 (Fixed Gobo)	0---7 8---15 16---23 24---31 32---39 40---47 48---55 56---63 64---71 72---79 80---87 88---95 96---103 104---111 112---119 120---126 127---133 134---140 141---147 148---154 155---161 162---168	WHITE GOB01 GOB02 GOB03 GOB04 GOB05 GOB06 GOB07 GOB08 GOB09 GOB010 GOB011 GOB012 GOB013 GOB014 GOB01 Shake Slow---->Fast GOB02 Shake Slow---->Fast GOB03 Shake Slow---->Fast GOB04 Shake Slow---->Fast GOB05 Shake Slow---->Fast GOB06 Shake Slow---->Fast GOB07 Shake Slow---->Fast

	169---175 176---182 183---189 190---196 197---203 204---210 211---217 218---236 237---255	GOB08 Shake Slow---->Fast GOB09 Shake Slow---->Fast GOB010 Shake Slow---->Fast GOB011 Shake Slow---->Fast GOB012 Shake Slow---->Fast GOB013 Shake Slow---->Fast GOB014 Shake Slow---->Fast CW Slow Rotation----> Fast Rotation CCW Slow Rotation----> Fast Rotation
17 PRISM	0---127 128--255	EXCLUDED INSERTED
18 PRISM Rotation	0---127 128---191 192---255	Position 0° ---->360° CW Slow Rotation-----> Fast Rotation CCW Slow Rotation-----> Fast Rotation
19 FORST	0---255	EXCLUDED----->INSERTED
20 FOCUS	0---255	Near --> Far
21 FOCUS FINE	0---255	
22 ZOOM	0---255	Narrow --> Wide
23 ZOOM FINE	0---255	
24 PAN(X)	0---255	PAN 0° -->540°
25 PAN(X) FINE	0---255	
26 TILTE(Y)	0---255	TILT 0° -->245°
27 TILTE(Y) FINE	0---255	
28 P/T SPEED	0---128 129---170 171---211 212---255 252---255	Fastest----->Slowest Slow Speed (1/3 MaxSpeed) Medium Speed (1/2 MaxSpeed) Fast Speed (Fastest Speed) Blackout when moving
29 Lamp Control	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	NOT LAMP ON NOT LAMP OFF NOT HALF POWER NOT FULL POWER
30 Control	0---127 128--255	NOT Reset ALL

DMX 数值 精简模式 (23 通道)

通道	DMX 值	功能
1 Dimmer	0---255	Darkness----->Bright
2 Shutter, strobe	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Closed Slow Strobe--->Fast Strobe Open Slow Pulsation--->Fast Pulsation Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
3 IRIS	0---128 129---131 132---171 172---211 212---251 252---255	MAX----->MIN Close Slow Puslation----> Fast Puslation Slow Puslation Fast Close---->Fast Puslation Fast Close Slow Puslation Fast Open---->Fast Puslation FastOpen OPEN
4 Cyan	0---255	EXCLUDED----->INSERTED
5 Magenta	0---255	EXCLUDED----->INSERTED
6 Yellow	0---255	EXCLUDED----->INSERTED
7 CMY Macro	0---255	
8 Color	0---104 105---117 118---130 131---144 145---157 158---169 170---182 183---195 196---208 209---231 232---255	Color Scroll White--->Color7 Color7 Color6 Color5 Color4 Colo3 Color2 Color1 White CW Slow Rotation-----> Fast Rotation CCW Slow Rotation-----> Fast Rotation
9 Gobol Select	0----9 10----20 21----29 30----39 40----49 50----59 60----69 70----79	WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7

	80---89 90---104 105---119 120---134 135---149 150---164 165---179 180---194 195---209 210---232 233---255	GOB0 8 GOB01 Shake Slow---->Fast GOB02 Shake Slow---->Fast GOB03 Shake Slow---->Fast GOB04 Shake Slow---->Fast GOB05 Shake Slow---->Fast GOB06 Shake Slow---->Fast GOB07 Shake Slow---->Fast GOB08 Shake Slow---->Fast CW Slow Rotation----> Fast Rotation CCW Slow Rotation----> Fast Rotation
10 Gobo1 index Rotation	0---127 128---191 192---255	Position 0° ---->360° CW Fast Rotation---> Slow Rotation CCW Slow Rotation---> Fast Rotation
11 Gobo2(Fixed Gobo)	0---7 8---15 16---23 24---31 32---39 40---47 48---55 56---63 64---71 72---79 80---87 88---95 96---103 104---111 112---119 120---126 127---133 134---140 141---147 148---154 155---161 162---168 169---175 176---182 183---189 190---196 197---203 204---210 211---217 218---236	WHITE GOB01 GOB02 GOB03 GOB04 GOB05 GOB06 GOB07 GOB08 GOB09 GOB010 GOB011 GOB012 GOB013 GOB014 GOB01 Shake Slow---->Fast GOB02 Shake Slow---->Fast GOB03 Shake Slow---->Fast GOB04 Shake Slow---->Fast GOB05 Shake Slow---->Fast GOB06 Shake Slow---->Fast GOB07 Shake Slow---->Fast GOB08 Shake Slow---->Fast GOB09 Shake Slow---->Fast GOB010 Shake Slow---->Fast GOB011 Shake Slow---->Fast GOB012 Shake Slow---->Fast GOB013 Shake Slow---->Fast GOB014 Shake Slow---->Fast CW Slow Rotation---> Fast Rotation

	237---255	CCW Slow Rotation---> Fast Rotation
12 PRISM	0---127 128--255	EXCLUDED INSERTED
13 PRISM Rotation	0---127 128---191 192---255	Position 0° ---->360° CW Slow Rotation---> Fast Rotation CCW Slow Rotation---> Fast Rotation
14 FORST	0---255	EXCLUDED----->INSERTED
15 FOCUS	0---255	Near --> Far
16 ZOOM	0---255	Narrow --> Wide
17 PAN(X)	0---255	PAN 0° -->540°
18 PAN(X) FINE	0---255	
19 TILTE(Y)	0---255	TILT 0° -->245°
20 TILTE(Y) FINE	0---255	
21 P/T SPEED	0---128 129---170 171---211 212---255 252---255	Fastest----->Slowest Slow Speed (1/3 MaxSpeed) Medium Speed (1/2 MaxSpeed) Fast Speed (Fastest Speed) Blackout when moving
22 Lamp Control	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	NOT LAMP ON NOT LAMP OFF NOT HALF POWER NOT FULL POWER
23 Control	0---127 128--255	NOT Reset ALL