

<b>Leader904</b>	<b>21CH Mode3</b>	<b>17CH Mode2</b>	<b>14CH Mode1</b>	<b>DMX Value</b>	<b>Function</b>
Dimmer	1	1	1	0---255	Darkness----->Bright
Dimmer FINE	2	2	2	0---255	
Strobe	3	3	3	0---7 8---63 64---71 72---127  128---133 134---189  190--195 196--250 251--255	Undefined Fast Strobe----->SlowStrobe Undefined Fast Pulation Slow Close--->Fast Pulation Fast Close Undefined Slow Pulation Fast Close--->Fast Pulation Fast Close Undefined Random Strobe Undefined
Red	4	4	4	0---255	Darkness----->Bright
Red FINE	5			0---255	
Green	6	5	5	0---255	Darkness----->Bright
Green FINE	7			0---255	
Blue	8	6	6	0---255	Darkness----->Bright
Blue FINE	9			0---255	
White	10	7	7	0---255	Darkness----->Bright
White FINE	11			0---255	
Color	12	8	8	0---10 11---20 21---30 31---40 41---50 51---60 61---70 71---80 81---90 91---100 101---110 111--199 120---250 251---255	Undefined Color1 Color2 Color3 Color4 Color5 Color6 Color7 Color8 Color9 Color10 Undefined Color Loop(Color1<--->Color10) Undefined
CTC	13	9		0---255	High color temperature--->Low color temperature
Focus	14	10	9	0---255	
Pan	15	11	10	0---255	
Pan FINE	16	12	11	0---255	
Tilte	17	13	12	0---255	

Tilte FINE	18	14	13	0---255	
P/T Speed	19	15		0---128 129---170 172---211 212---255	Fastest Speed----->Slowest Speed Slow Speed Medium Speed Fast Speed(252---255 :Blackout when moving)
Dimmer Mode(Dimmer Curve)	20	16		0---64 65---128 129--192 193---255	Dimmer Curve1(Log Curve) Dimmer Curve2(NExp Curve) Dimmer Curve3(Line Curve) Dimmer Curve4(S Curve)
Control	21	17	14	0---130 131---155 156--255	Undefined Reset ALL Undefined