

Moore 330II Beam	22CH Mode1	18CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3	Closed
			4---103	Slow Strobe--->Fast Strobe
			104---107	Open
			108---207	Slow Pulsation--->Fast Pulsation
			208---212	Open
			213---225	Random Slow Strobe
			226---238	Random Medium Strobe
			239---251	Random Fast Strobe
			252---255	Open
Color	4	3	0---4	WHITE
			5---8	WHITE + RED
			9---12	RED
			13---17	RED + ORANGE
			18---21	ORANGE
			22---55	ORANGE + AQUAMARI
			26---29	AQUAMARINE
			30--- 34	AQUAMARINE + GREEN
			35--- 38	GREEN
			39---42	GREEN + LIGHT GREEN
			43---46	LIGHT GREEN
			47---51	LIGHT GREEN + LAVEN
			52---55	LAVENDER
			56---59	LAVENDER + PINK
			60---63	PINK
			64---68	PINK + YELLOW
			69---72	YELLOW
			73---76	YELLOW + MAGENTA
			77---81	MAGENTA
			82---85	MAGENTA + CYAN
			86---89	CYAN
			90---93	CYAN + CTO 260
			94---98	CTO 260
			99---102	CTO 260 + CTO 190
			103---106	CTO 190
			107---110	CTO 190 + CTB 8000
			111---115	CTB 8000
			116---119	CTB 8000 + BLUE
			120---123	BLUE
			124--- 127	BLUE + WHITE
			128---191	CW SlowRotation----->Fast Rotation
			192---255	CCW Slow Rotation----->Fast Rotation

Gobo1(Fixed Gobo)	5	4	0---3 4---7 8---11 12---15 16---19 20---23 24---27 28---31 32---35 36---39 40---43 44---47 48---51 52--- 55 56---59 60---63 64---67 68---71 72---113 114---117 118---159 160---166 167---172 173---179 180---185 186--- 191 192---198 199---204 205---211 212---217 218---223 224---230 231---236 237---243 244---249 250---255	WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOBO 9 GOBO 10 GOBO 11 GOBO 12 GOBO 13 GOBO 14 GOBO 15 GOBO 16 GOBO 17 CW SlowRotation----->FastRotation WHITE CCW SlowRotation-----> FastRotation GOBO 2 Shake Slow---->Fast GOBO 3 Shake Slow---->Fast GOBO 4 Shake Slow---->Fast GOBO 5 Shake Slow---->Fast GOBO 6 Shake Slow---->Fast GOBO 7 Shake Slow---->Fast GOBO 8 Shake Slow---->Fast GOBO 9 Shake Slow---->Fast GOBO10 Shake Slow---->Fast GOBO11 Shake Slow---->Fast GOBO12 Shake Slow---->Fast GOBO13 Shake Slow---->Fast GOBO14 Shake Slow---->Fast GOBO15 Shake Slow---->Fast GOBO16 Shake Slow---->Fast
Gobo2 Select	6	5	0---9 10--- 20 21--- 29 30--- 39 40--- 49 50--- 59 60--- 69 70--- 79 80--- 89	WHITE GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 GOBO8

			90---104 105---119 120---134 135---149 150---164 165---179 180---194 195---209 210---255	GOBO1 Shake Slow---->Fast GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast GOBO8 Shake Slow---->Fast CCW SlowRotation-----> FastRotation
GOBO2 index Rotation	7	6	0---127 128---191 192---255	Position 0° ---->360° (FINE in CH8) CW SlowRotation-----> FastRotation CCW Fast Rotation-----> SlowRotation
GOBO2 indexRotation FINE	8		0---255	GOBO2 index Rotation FINE
PRISM	9	7	0---127 128--255	EXCLUDED INSERTED
PRISM Rotation	10	8	0---127 128---191 192---255	Position 0° ---->360° CW SlowRotation-----> FastRotation CCW Fast Rotation----->SlowRotation
FORST	11	9	0---255	EXCLUDED----->INSERTED
FOCUS	12	10	0---255	
FOCUS FINE	13		0---255	
ZOOM	14	11	0---255	
ZOOM FINE	15		0---255	
PAN(X)	16	12	0---255	
PAN(X) FINE	17	13	0---255	
TILTE(Y)	18	14	0---255	
TILTE(Y) FINE	19	15	0---255	
P/T SPEED	20	16	0---128 129---170 171---211 212---255	Fastest----->Slowest Slow Speed ( 1/3 MaxSpeed) Medium Speed ( 1/2 MaxSpeed) Fast Speed (Fastest Speed)
Lamp Control	21	17	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP ON Undefined LAMP OFF Undefined HALF POWER Undefined FULL POWER
Control	22	18	0---127 128--255	Undefined Reset ALL