

SEER F500A	21CH Mode1	18CH Mode2	DMX Value	Funciton
Dimmer	1	1	0---255	Darkness----->Bright
Dimmer FINE	2		0---255	
Strobe	3	2	0---3 4---103 104---107 108---207 208---212 213---225 226---238 239---251 252---255	Closed Slow Strobe--->Fast Strobe Open Slow Pulsation--->Fast Pulsation Open Random Slow Strobe Random Medium Strobe Random Fast Strobe Open
Color	4	3	0---4 5---12 13---21 22---29 30---38 39---46 47---55 56---63 64---72 73---81 82---89 90---98 99---106 107---115 116---123 124---189 190---255	WHITE RED ORANGE AQUAMARINE GREEN LIGHT GREEN LAVENDER PINK YELLOW MAGENTA CYAN CTO 260 CTO 190 CTB 8000 BLUE CW SlowRotation----->FastRotation CCW FastRotation----->Slow Rotation

Fixed Gobo	5	4	0---3 4---7 8---11 12---15 16---19 20---23 24---27 28---31 32---35 36---39 40---43 44---47 48---51 52--- 55 56---59 60---63 64---67 68---71 72---113 114---117 118---159 160---166 167---172 173---179 180---185 186--- 191 192---198 199---204 205---211 212---217 218---223 224---230 231---236 237---243 244---249 250---255	WHITE GOBO 1 GOBO 2 GOBO 3 GOBO 4 GOBO 5 GOBO 6 GOBO 7 GOBO 8 GOBO 9 GOBO 10 GOBO 11 GOBO 12 GOBO 13 GOBO 14 GOBO 15 GOBO 16 GOBO 17 CW FastRotation----->SlowRotation WHITE CCW SlowRotation----->FastRotation GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO 5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast GOBO8 Shake Slow---->Fast GOBO9 Shake Slow---->Fast GOBO10 Shake Slow---->Fast GOBO11 Shake Slow---->Fast GOBO12 Shake Slow---->Fast GOBO13 Shake Slow---->Fast GOBO14 Shake Slow---->Fast GOBO15 Shake Slow---->Fast GOBO16 Shake Slow---->Fast
-------------------	----------	----------	--	---

Gobo1 Index	6	5	0---2 3---5 6---10 11---16 17--- 22 23---28 29---34 35---40 41---52 53---70 71---88 89---106 107--124 125---142 143---160 161---178 179---196 197---226 218---255	WHITE GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 GOBO8 GOBO1 Shake Slow---->Fast GOBO2 Shake Slow---->Fast GOBO3 Shake Slow---->Fast GOBO4 Shake Slow---->Fast GOBO5 Shake Slow---->Fast GOBO6 Shake Slow---->Fast GOBO7 Shake Slow---->Fast GOBO8 Shake Slow---->Fast CW SlowRotation----->FastRotation CCW FastRotation-----> SlowRotation
Gobo1Index Rotation	7	6	0---127 128---191 192---255	Position 0 ° ---->360 ° (FINE in CH8) CW SlowRotation-----> FastRotation CCWFastRotation----->SlowRotati on
Gobo1Index Rotation FINE	8		0---255	GOBO1 index Rotation FINE
PRISM1 & FORST	9	7	0---127 128---191 192---255	EXCLUDED FORST PRISM1
PRISM1 Rotation	10	8	0---127 128---190 191---194 195---255	Position 0° ---->360° CW FastRotation-----> SlowRotation STOP CCWSlowRotation----->FastRotati on
PRISM2	11	9	0---127 128---191 192---255	EXCLUDED PRISM1 PRISM2
PRISM2 Rotation	12	10	0---255	
FOCUS	13	11	0---255	

FOUCS FINE	14	12	0---255	
PAN(X)	15	13	0---255	
PAN(X) FINE	16	14	0---255	
TILTE(Y)	17	15	0---255	
TILTE(Y) FINE	18	16	0---255	
P/T SPEED	19		0---128 129---170 171---211 212---255	Undefined Undefined Undefined Undefined
Lamp Control	20	17	0---32 33---64 65---96 97---128 129---160 161---193 194---225 226---255	Undefined LAMP OFF(>4s) Undefined LAMP ON(>4s) Undefined HALF POWER Undefined FULL POWER
Control	21	18	0---127 128---255	Undefined Reset ALL(>4s)